


AEG

Mini-Contactors



Approvals

IEC/EN 60947-1
IEC/EN 60947-4-1
IEC/EN 60947-4-1
VDE 0660
NEMA ICS-1
UL508
CSA C22.2-14

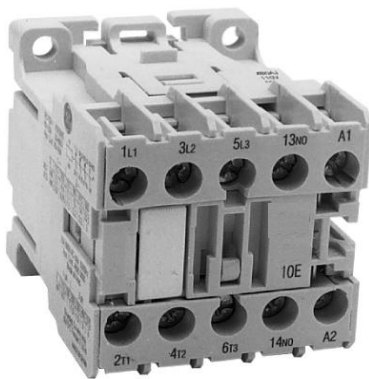

Part Number	Full Load Amperage	Horsepower					
		Single Phase		Three Phase			
		115	230	208	203	460	575
LS02K.10-*	6	1/3	1	1.5	1.5	3	3
LS05.10-*	9	1/2	1.5	3	3	5	5
LS06K.10-*	12	1/2	2	3	3	7.5	10

* - Coil Selection

AC	DC	Suffix
24V	-	G
120V	-	A
208/230V	-	C
347V	-	347V
480V	-	E
600V	-	F
-	12V	MSW
-	24V	NSW
-	48V	OSW
-	110V	PSW

Standard Accessories

Part Number	Description
HS05K.11	1NO/1NC Aux Contacts - Top
HS05K.20	2NO Aux Contacts - Top
HS05K.40	4NO Aux Contacts - Top
HS05K.31	3NO/1NC Aux Contacts - Top
HS05K.22	2NO/2NC Aux Contacts - Top
HS05K.04	4NC Aux Contacts - Top
HS05.10	1NO Aux Contacts - Side
HS05.01	1NC Aux Contacts - Side
LS05-VB05	Mechanical Interlock Kit
LK-C130-*	Contacteur Coil

Overloads

<ul style="list-style-type: none"> —Class 10A trip —Ambient Temperature Compensation —Differential Phase Loss Sensitivity —Manual Trip Test & Trip Indication <ul style="list-style-type: none"> —Stop Button (red) —Reset Button (blue) —Two positions: Manual (H) & Automatic (A) <ul style="list-style-type: none"> —Pre-wired coil and NC contact connection —Auxiliary contact feed-through wire, to facilitate installation <ul style="list-style-type: none"> —Direct mounting or panel mount with base 	Part Number	Amperage Range	Part Number	Amperage Range
		B05-A	0.11 - 0.17	B05-H
	B05-B	0.17 - 0.26	B05-IN	2.2 - 3.2
	B05-C	0.26 - 0.43	B05-JN	3.0 - 4.7
	B05-D	0.43 - 0.65	B05-K	4.0 - 6.3
	B05-E	0.65 - 1.0	B05-L	5.5 - 8.0
	B05-F	0.85 - 1.3	B05-M	7.5 - 10.5
	B05-G	1.1 - 1.6	B05-NN	10 - 14
	B05-GN	1.35 - 2.0		